



























 





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Smart / List
 4	 4
 5	 5
 6	 6
 [<>]	 Picture / Format
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z	 Menu / Home

Original	Replacement
 P+	 CH+ / Page+
 P+	 Up
 -	 Left
 -	 Vol-
 OK	 OK
 +	 Right
 +	 Vol+
 TXT	 Text / Goto
 P-	 CH- / Page-
 P-	 Down
 AV	 AV / Input / RDS
 Scan/[]	 Setup / OPT /
 PAP/Pause	 Display / Media
 SIZE/Stop	 Zoom / Size
 Pos/Play	 D.Menu / Top
 Red/I<	 Red / Netflix / Search
 Green/>I	 Green / APP / Repeat















 














 
 

















 





 

Original		Replacement	
	Yellow/Pause/<		Yellow / YouTube / Repeat
	Blue/>>		Blue / Prime Video / Random

Original		Replacement	






Original	Replacement
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Info / Angle
	 Menu / Home
	 CH+ / Page+

Original	Replacement
	 Up
	 Left
	 Vol-
	 OK
	 Right
	 Vol+
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Pause / Step / Freeze
	 Stop / Hold
	 Play / Slow
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-























 

 




 


Original	Replacement	Original	Replacement
 Blue/>>>	 >> / Tune+		



 





Original	Replacement
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Mute / Dimmer
	 Info / Angle
	 Menu / Home

Original	Replacement
	 CH+ / Page+
	 Up
	 Left
	 Vol-
	 OK
	 Vol+
	 Right
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Pause / Step / Freeze
	 Stop / Hold
	 Play / Slow
	 I<< / Preset-
	 >>I / Preset+











 



 

























 













 

 



 

 

 

 





Original	Replacement	Original	Replacement
 Yellow/<<	 << / Tune-		
 Blue/>>	 >> / Tune+		





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	PIP		Smart / List
	4		4
	5		5
	6		6
	[<>]		Picture / Format
	7		7
	8		8
	9		9
	-/-		Guide / EPG / -/-
	0		0
	i		Info / Angle
	Z		Menu / Home
	P+		CH+ / Page+
	P+		Up
	-		Vol-
	-		Left
	OK		OK
	+		Vol+
	+		Right
	TXT		Text / Goto
	P-		CH- / Page-
	P-		Down
	AV		AV / Input / RDS
	Scan/[']		Setup / OPT /
	PAP/Pause		Pause / Step / Freeze
	Size/Stop		Stop / Hold
	Pos/Play		Play / Slow
	Red/I<		I<< / Preset-
	Green/>I		>>I / Preset+
	Yellow/Pause/<		<< / Tune-





Original	Replacement	Original	Replacement
Blue/>>>	>> / Tune+		

