



Original	Replacement
 Standby / On	 Power
 BD	 Shift + 5
 DVD	 Shift + 2
 BDR / BDR	 Shift + 7
 HDMI	 Shift + 0
 TV	 Shift + 1
 CD	 Shift + 3
 NET	 Shift + 9
 ADPT	 Shift + Guide / EPG / -/-
 iPod / USB	 Shift + 8
 SAT / CBL	 Shift + Fav / Marker / PC
 MHL	 Shift + 4
 TUNER	 Shift + 6
 Input Select ↻	 CH- / Page-
 Input Select ↻	 CH+ / Page+
 i / Status	 Info / Angle
 Volume+	 Vol+

Original	Replacement
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Up	 Up
 Video	 Picture / Format
 Tools Menu	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Home Menu	 Menu / Home
 iPod Ctrl.	 D.Menu / Top
 Down	 Down
 Return	 Back / Return
 Features PHASE	 Red / Netflix / Search
 Features ECO	 Yellow / YouTube / Repeat
 MPX	 Shift + Pause / Step / Freeze
 Pause	 Pause / Step / Freeze






 








	Original	Replacement		Original	Replacement
	BAND	+	Shift + Play /		3
	Play		Play / Slow		+ Favorite
	PTY	+	Shift + Stop /		Audio / THX
	Stop		Stop / Hold		4
	Preset -	+	Shift + I<< / Preset-		Signal Sel.
	I<<		I<< / Preset-		MCACC
	Preset+	+	Shift + >>I / Preset+		5
	>>I		>>I / Preset+		6
	Tune-	+	Shift + << /		CH. Level
	<<		<< / Tune-		Disp / Auto
	Tune+	+	Shift + >> /		7
	>>		>> / Tune+		Speakers
	Auto / ALC /		Subtitle / EQ		Dimmer
	1		1		8
	Standard		Smart / List		9
	2		2		Sleep
	Adv. Surr.		Eject / Surround		Repeat
					3
					Fav / Marker / PC
					Sound / Title
					4
					TV/Radio /
					Zoom / Size
					5
					6
					Text / Goto
					Display / Media
					7
				+	Shift + Audio / Lang I/II
				+	Shift + Mute / Dimmer
					8
					9
					Sleep / Timer
					Green / APP / Repeat






 
 





Original	Replacement
 Standby / On	 Power
 BD	 Shift + 5
 DVD	 Shift + 2
 BDR / BDR	 Shift + 7
 HDMI	 Shift + 0
 TV	 Shift + 1
 CD	 Shift + 3
 NET	 Shift + 9
 ADPT	 Shift + Guide / EPG / -/-
 iPod / USB	 Shift + 8
 SAT / CBL	 Shift + Fav / Marker / PC
 MHL	 Shift + 4
 TUNER	 Shift + 6
 Input Select ↻	 CH- / Page-
 Input Select ↻	 CH+ / Page+
 i / Status	 Info / Angle
 Volume+	 Vol+

Original	Replacement
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Up	 Up
 Video	 Picture / Format
 Tools Menu	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Home Menu	 Menu / Home
 iPod Ctrl.	 D.Menu / Top
 Down	 Down
 Return	 Back / Return
 Features PHASE	 Red / Netflix / Search
 Features ECO	 Yellow / YouTube / Repeat
 MPX	 Shift + Pause / Step / Freeze
 Pause	 Pause / Step / Freeze





Original	Replacement
 BAND	 Shift + Play /
 Play	 Play / Slow
 PTY	 Shift + Stop /
 Stop	 Stop / Hold
 Preset -	 Shift + I<< / Preset-
 I<<	 I<< / Preset-
 Preset+	 Shift + >>I / Preset+
 >>I	 >>I / Preset+
 Tune-	 Shift + << /
 <<	 << / Tune-
 Tune+	 Shift + >> /
 >>	 >> / Tune+
 Auto / ALC /	 Subtitle / EQ
 1	 1
 Standard	 Smart / List
 2	 2
 Adv. Surr.	 Eject / Surround

Original	Replacement
 3	 3
 + Favorite	 Fav / Marker / PC
 Audio / THX	 Sound / Title
 4	 4
 Signal Sel.	 TV/Radio /
 MCACC	 Zoom / Size
 5	 5
 6	 6
 CH. Level	 Text / Goto
 Disp / Auto	 Display / Media
 7	 7
 Speakers	 Shift + Audio / Lang I/II
 Dimmer	 Shift + Mute / Dimmer
 8	 8
 9	 9
 Sleep	 Sleep / Timer
 Repeat	 Green / APP / Repeat



