



| Original   | Replacement   |
|--|---|
|  PP         |  Back / Return       |
|  Power      |  Power               |
|  1          |  1                   |
|  2          |  2                   |
|  3          |  3                   |
|  4          |  4                   |
|  5          |  5                   |
|  6          |  6                   |
|  7          |  7                   |
|  8          |  8                   |
|  9          |  9                   |
|  P<P      |  Fav / Marker / PC |
|  0        |  0                 |
|  --       |  Guide / EPG / --  |
|  Menu [M] |  Menu / Home       |
|  Info [i] |  Info / Angle      |
|  I-II     |  Audio / Lang I/II |

| Original   | Replacement   |
|--|---|
|  Mute               |  Mute / Dimmer                 |
|  Left               |  Left                          |
|  Up                 |  Up                            |
|  Right              |  Right                         |
|  OK                 |  OK                            |
|  Down               |  Down                          |
|  V -                |  Vol-                          |
|  V +                |  Vol+                          |
|  P -                |  CH- / Page-                   |
|  P +                |  CH+ / Page+                   |
|  Red / Sound      |  Red / Netflix / Search      |
|  Red / Sound      |  Sound / Title               |
|  Green / Picture  |  Green / APP / Repeat        |
|  Green / Picture  |  Picture / Format            |
|  Yellow / Feature |  Yellow / YouTube / Repeat   |
|  Blue / Install   |  Blue / Prime Video / Random |
|  Text             |  Text / Goto                 |





| Original        | Replacement                       |
|-----------------|-----------------------------------|
| [≡o]            | TIMER SLEEP Sleep / Timer         |
| Hold            | HOLD Stop / Hold                  |
| [≡X]            | EXIT CANCEL Exit / Cancel / Clear |
| Mix / PIP Swap  | LIST SMART Smart / List           |
| PIP / Size      | SIZE ZOOM Zoom / Size             |
| PIP Down / [≡?] | PRESET- I<< / Preset-             |
| PIP Up / Index  | PRESET+ >>I / Preset+             |
| [TV]            | PROGRAM TV/RADIO TV/Radio /       |
| [AV]            | RDS AV INPUT AV / Input / RDS     |
|                 |                                   |
|                 |                                   |
|                 |                                   |
|                 |                                   |
|                 |                                   |
|                 |                                   |
|                 |                                   |
|                 |                                   |
|                 |                                   |
|                 |                                   |
|                 |                                   |
|                 |                                   |
|                 |                                   |
|                 |                                   |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

