



Original		Replacement		Original		Replacement	
	Power		Power		Timer Rec		AV
	Eject		Shift + Eject		Rec OTR		Rec
	Open/Close		Eject		Marker/Tape		Options
	Display Call		Info		Jump/Zero Return		Pre Ch
	1		1		Clock/Counter		Yellow
	2		2		Counter Reset		Green
	3		3		Tv/VCR		TV/R
	4		4		VCR		Smart
	5		5		DVD		Media
	6		6		Setup Menu		Menu
	7		7		DVD Menu		D. Menu
	8		8		Up		Up
	9		9		Down		Down
	0/AV		0		Right/TRK+		Right
	Channel+		Ch +		Left/TRK-		Left
	Channel-		Ch -		Enter/Select		Ok
	Showview/Progra		Guide		Title		Red





Original	Replacement
 Return	 Back
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 I<</- Index/Skip	 I<<
 >>	 >>
 >>I/Skip/Index +	 >>I
 I>/Slow	 Blue
 Cancel	 Exit
 Repeat A-B	 Text
 Zoom	 3D
 Angle	 List
 Play Mode	 Shift + Play
 Subtitle	 Subt
 Audio	 Dual

Original	Replacement

