









 













Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Shift + Guide / EPG / -/--
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	FAV		Fav / Marker / PC
	Vol+		Vol+
	MTS I/II		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Sub-T		Subtitle / EQ
	CH-		CH- / Page-
	Aspect		Shift + Picture / Format
	Freeze		Shift + Pause / Step /
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





Original	Replacement
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	<< / Text/CC
	<< / Text/CC
	Play/Pause / Play / Slow
	Play/Pause / Pause / Step / Freeze
	>> / Reveal
	<<< / Hold
	<<< / Hold
	>> / Size
	>> / Size
	Stop / Index
	Root
	Shift + Green / APP / Repeat

Original	Replacement
	List
	T.Shift
	USB
	EPG
	Smart / List
	TV/Radio /
	Shift + 8
	Guide / EPG / -/--

