



Original	Replacement	Original	Replacement
	Power		Vol-
	Input		Home
	1		Menu / Home
	2		CH- / Page-
	3		Guide / EPG / -/-
	4		Up
	5		Info / Angle
	6		Left
	7		OK
	8		Right
	9		Back / Return
	Lang		Down
	0		Exit / Cancel / Clear
	TXT		<< / Tune-
	Vol+		Pause / Step / Freeze
	Mute / Dimmer		>> / Tune+
	CH+ / Page+		Rec / Rec Mode
			Play / Slow



