


 

 
 
 
 

 
 
 

 


 
 

 
 


 


 


 
 

 
 
 















Original	Replacement	Original	Replacement
 Power	 Power	 PR+	 Ch +
 Source	 AV	 PR-	 Ch -
 1	 1	 CH List	 List
 2	 2	 Content	 Smart
 3	 3	 Menu	 Menu
 4	 4	 Guide	 Guide
 5	 5	 Info	 Info
 6	 6	 Tools	 Options
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 TTX/MIX	 Text	 Enter	 Ok
 PRE-CH	 Pre Ch	 Return	 Back
 Vol+	 Vol +	 Exit	 Exit
 Vol-	 Vol -	 Red/A	 Red
 Mute	 Mute	 Green/B	 Green





Original	Replacement	Original	Replacement
 Yellow/C	 Yellow		
 Blue/D	 Blue		
 Internet TV	 TV/R		
 Media.P	 Media		
 Dual I-II	 Dual		
 AD	 Shift + Subt		
 P.Size	 Format		
 Subt.	 Subt		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

