

 



 

 

 

 

 
 
 
 
 
 
 

 

 


 

 








Original	Replacement
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Mute	 Mute
 CH List	 List
 Vol+	 Vol +

Original	Replacement
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Settings	 Options
 Home	 Smart
 Guide	 Guide
 Info	 Info
 Rec	 Rec
 Enter	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Return	 Back
 Exit	 Exit
 Red	 Red
 Green	 Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	Play		Play				
	Pause		Pause				
	<</ <<		<<				
	>>/>>		>>				
	Stop		Stop				
	AD/Subt.		Subt				
	Pic Size		Format				
	Picture	+	Shift + Format				

