 



 



 







 

 



 



 







 

 








 




 

 





 








 




 

 

 

 



 







 



 





Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute / Dimmer
 Tv/DTV	 TV/Radio /	 Vol-	 Vol-
 Source	 AV / Input / RDS	 PR-	 CH- / Page-
 1	 1	 Guide	 Guide / EPG / -/--
 2	 2	 Menu	 Menu / Home
 3	 3	 CH.List	 Smart / List
 4	 4	 Tools	 Setup / OPT /
 5	 5	 Up	 Up
 6	 6	 Return	 Shift + Back / Return
 7	 7	 Left	 Left
 8	 8	 Enter	 OK
 9	 9	 Right	 Right
 -/--	 Shift + Guide / EPG / -/--	 Info	 Info / Angle
 0	 0	 Down	 Down
 Pre-CH	 Back / Return	 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 PR+	 CH+ / Page+	 Green	 Green / APP / Repeat





Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TTX/MIX	 Text / Goto
 P.Size	 Zoom / Size
 DMA	 Display / Media
 E.Mode	 D.Menu / Top
 3D	 Shift + 3
 Subt.	 Subtitle / EQ
 <<<	 <<< / Tune-
	 Pause / Step / Freeze
 >>>	 >>> / Tune+
 Rec	 Rec / Rec Mode
 ▶	 Play / Slow
 ◻	 Stop / Hold

Original	Replacement

