












 



 



 

 
 
 











Original	Replacement
 Power	 Power
 Open / Close	 Eject
 Dimmer /	 TV/R
 DVD	 Shift + 1
 Tuner / Band	 Shift + 2
 AUX	 Shift + 3
 NTSC/PAL / EZ	 AV
 MO/ST / Slow	 Format
 MO/ST / Slow	 Shift + Play
 Subtitle	 Subt
 Step	 Shift + Pause
 DSP / EQ	 Options
 Repeat	 Text
 I<<	 I<<
 Stop	 Stop
 Play / Pause	 Pause
 Play / Pause	 Play

Original	Replacement
 >>I	 >>I
 Dolby PLII Mode	 Smart
 Volume +	 Vol +
 Volume -	 Vol -
 Tuning + / CH +	 Ch +
 Tuning - / CH -	 Ch -
 Dolby PLII Effect	 Media
 Return	 Back
 Menu	 Menu
 Info	 Info
 Mute	 Mute
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 1 / RDS Display	 1






 









 











 



 











 
 

 


 

 

 
 
 
Original	Replacement
1 / RDS Display	+ Shift + Info
2	2
3 / TA	3
Test Tone	3D
4 / PTY -	+ Shift + Left
4 / PTY -	4
5 / PTY Search	5
5 / PTY Search	+ Shift + Ok
6 / PTY +	6
6 / PTY +	+ Shift + Right
Sound Edit	Dual
7	7
8	8
9	9
P.Scan / Tuner	Pre Ch
Sleep	Sleep
0	0

Original	Replacement
Cancel	Exit
Zoom	+ Shift + Eject
Logo	Red
Slide Mode	Green
Digest	Guide
Remain	Yellow





Original	Replacement
 Power	 Power
 TV / Video	 TV/R
 Volume +	 Vol +
 Volume -	 Vol -
 Tuning + / CH +	 Ch +
 Tuning - / CH -	 Ch -
 Menu	 Menu
 Info	 Info
 Mute	 Mute
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 1 / RDS Display	 1
 2	 2
 3 / TA	 3

Original	Replacement
 4 / PTY -	 4
 5 / PTY Search	 5
 6 / PTY +	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sleep	 Sleep
 Cancel	 Back

