









 

 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Source	 AV	 Vol-	 Vol -
 HDMI	 Media	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Home	 Smart
 3	 3	 Menu	 Menu
 4	 4	 Guide	 Guide
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 TTX/MIX	 Text	 Right	 Right
 PRE-CH	 Pre Ch	 Left	 Left
 Mute	 Mute	 Red	 Red
 CH List	 List	 Green	 Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 Dual I-II	 Dual		
 Content	 D. Menu		
 3D	 3D		
 Alarm	 TV/R		
 P.Size	 Format		
 Subt.	 Subt		
 Enter	 Ok		
 <</ <<	 <<		
 Pause	 Pause		
 >>/>>	 >>		
 Play	 Play		
 Rec	 Rec		
 Stop	 Stop		

