



























 

 
 


















 
 

 




Original		Replacement		Original		Replacement	
	Power		Power		CH +		CH+ / Page+
	Mute		Mute / Dimmer		Vol -		Vol-
	1		1		Input		AV / Input / RDS
	2		2		CH -		CH- / Page-
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Right		Right
	7		7		Menu		Menu / Home
	8		8		Down		Down
	9		9		Exit		Exit / Cancel / Clear
	-/--		Shift + Guide / EPG / -/--		Display		Display / Media
	0		0		PMode		Picture / Format
	Recall		Back / Return		S.Mode		Sound / Title
	Vol +		Vol+		Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format		FAV		Fav / Marker / PC
	Nicam		Audio / Lang I/II		FAV -		Shift + Down





Original	Replacement	Original	Replacement
FAV+	FAV +	+ Shift + Up	
EPG	EPG	Guide / EPG / -/--	
TEXT	Text	Text / Goto	
HOLD	Hold	+ Shift + Stop /	
LANG	Lang	+ Shift + Audio / Lang I/II	
SUBTITLE	Subtitle	Subtitle / EQ	
INDEX / <<	Index / <<	<< / Tune-	
INDEX / <<	Index / <<	Info / Angle	
SIZE / >>	Size / >>	>> / Tune+	
SIZE / >>	Size / >>	Zoom / Size	
REVEAL / I<<	Reveal / I<<	I<< / Preset-	
SUBPAGE / >>I	Subpage / >>I	>>I / Preset+	
SUBPAGE / >>I	Subpage / >>I	Eject / Surround	
	Rec	Rec / Rec Mode	
	Play / Pause	Play / Slow	
	Play / Pause	Pause / Step / Freeze	
	Stop	Stop / Hold	

Original	Replacement	Original	Replacement
MEDIA	Media	+ Shift + Display / Media	
TV/RADIO	Red / TV/Radio	TV/Radio /	
TV/RADIO	Red / TV/Radio	Red / Netflix / Search	
	Green	Green / APP / Repeat	
	Yellow	Yellow / YouTube / Repeat	
	Blue	Blue / Prime Video / Random	

