



Original	Replacement
Open / Close	Eject / Surround
Power	Power
VCR	Shift + 4
DVD	Shift + 2
TV View	Shift + 1
1 / Tracking-	1
2	2
3 / Tracking+	3
4	4
5	5
6	6
7	7
8	8
9	9
P.Scan	Smart / List
0	0
Clear	Exit / Cancel / Clear

Original	Replacement
Setup	Setup / OPT /
Up / PR+	CH+ / Page+
Up / PR+	Up
Display	Display / Media
Left	Left
OK / Enter	OK
Right	Right
Edit	Picture / Format
Down / PR-	Down
Down / PR-	CH- / Page-
Menu	Menu / Home
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Search	Red / Netflix / Search
Zoom	Zoom / Size
<< REW	<< / Tune-
Play / Pause	Play / Slow





	Original	Replacement	Original	Replacement
	FF >>	>> / Tune+		
	I<< Prev	I<< / Preset-		
	Stop	Stop / Hold		
	Next >>I	>>I / Preset+		
	Rec	Rec / Rec Mode		
	Rec Mode	+ Shift + Rec / Rec Mode		
	Slow-	Vol-		
	Slow+	Vol+		
	Copy	D.Menu / Top		
	Input	AV / Input / RDS		
	Title	Sound / Title		
	Angle	Info / Angle		
	TV/VCR	TV/Radio /		
	Repeat	Green / APP / Repeat		
	A-B	Yellow / YouTube / Repeat		
	Timer	Sleep / Timer		

