







| Original | Replacement |
|--|---|
|  Mute |  Mute / Dimmer |
|  Power |  Power |
|  PP |  Back / Return |
|  I / II |  Audio / Lang I/II |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -- |  Fav / Marker / PC |
|  P<P |  Display / Media |
|  Menu |  Menu / Home |

| Original | Replacement |
|--|---|
|  Info |  Info / Angle |
|  Left |  Left |
|  P + |  Shift + CH+ / |
|  P + |  CH+ / Page+ |
|  Right |  Right |
|  P - |  Shift + CH- / |
|  P - |  CH- / Page- |
|  Vol - |  Vol- |
|  Vol + |  Vol+ |
|  Red / Sound |  Red / Netflix / Search |
|  Green / Picture |  Green / APP / Repeat |
|  Yellow / Feature |  Yellow / YouTube / Repeat |
|  Blue / Install |  Blue / Prime Video / Random |
|  TV |  TV/Radio / |
|  AV |  AV / Input / RDS |
|  Text |  Text / Goto |
|  Mix |  Shift + Text / Goto |





| Original | Replacement |
|---|---|
|  | TIMER SLEEP Sleep / Timer |
|  | SIZE ZOOM Zoom / Size |
|  | CLEAR EXIT CANCEL Exit / Cancel / Clear |
|  | HOLD Stop / Hold |
|  | SHIFT + ANGLE INFO Shift + Info / Angle |
|  | OK OK |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

