 

 

 

 





 

 

 



 

 




 
 

 

 






 




 

 



 

 

 





 






 




Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/--
 0	 0
 Pre PR	 Back / Return
 HDMI	 Shift + 0
 YPbPr	 D.Menu / Top
 Video	 Shift + 4

Original	Replacement
 PC	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 [<>]	 Picture / Format
 PR-	 CH- / Page-
 Dual	 Audio / Lang I/II
 Adj Audio	 Sound / Title
 Adj Video	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu/Exit	 Menu / Home
 Down	 Down





Original		Replacement	
	[i+]		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Teletext		Text / Goto
	Mix	+	Shift + Text /
	Size		Zoom / Size
	Subpage		Eject / Surround
	Index		TV/Radio /
	Subtitle		Subtitle / EQ
	Hold		Stop / Hold
	Reveal		Display / Media
	Eco		Setup / OPT /
	PR List		Smart / List
	Freeze		Pause / Step / Freeze
	Nothing		Exit / Cancel / Clear

Original		Replacement	

