






 

 


 
 


 





 

 
 




 



 
 




 
 




Original	Replacement	Original	Replacement
 ON/OFF	 Power	 Vol-	 Vol -
 Freeview Play	 Options	 Mute	 Mute
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Menu	 Menu
 4	 4	 Exit	 Exit
 5	 5	 Back	 Back
 6	 6	 FAV	 Pre Ch
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Tv Guide	 Guide	 OK	 Ok
 Picture	 Format	 Info	 Info
 Sound	 Dual	 Text	 Text
 Source	 AV	 Subtitle	 Subt
 Vol+	 Vol +	 TV	 TV/R





Original	Replacement	Original	Replacement
 You Tube	 Media		
 Netflix	 Smart		
 APPs	 Shift + Media		
 Rec/DVD Menu	 Rec		
 I<<	 I<<		
 >>I	 >>I		
 Stop	 Stop		
 Rec List/DVD	 D. Menu		
 <<	 <<		
 >>	 >>		
 Play	 Play		
 Pause	 Pause		
 Red/Goto	 Red		
 Green/A-B	 Green		
 Yellow/Angle	 Yellow		
 Blue/Repeat	 Blue		

Original	Replacement

