



























 



















 





 











 





Original		Replacement		Original		Replacement	
	Power		Power		Green		Green / APP / Repeat
	Power VCR		Shift + Power		Yellow		Yellow / YouTube / Repeat
	[*]		Info / Angle		Blue		Blue / Prime Video / Random
	Tv/Video		TV/Radio /		Vol+		Vol+
	1		1		Vol-		Vol-
	2		2		CH+		CH+ / Page+
	3		3		CH-		CH- / Page-
	4		4		Menu		Menu / Home
	5		5		TV		D.Menu / Top
	6		6		List		Smart / List
	7		7		[=?]		Setup / OPT /
	8		8		[=o]		Subtitle / EQ
	9		9		▼/O)/I/II/I+II		Audio / Lang I/II
	0		0		[=x]		AV / Input / RDS
	Recall		Back / Return		[=s]		Picture / Format
	-/--		Guide / EPG / -/--		[=+]		Zoom / Size
	Red		Red / Netflix / Search		Mute		Mute / Dimmer





Original	Replacement
[=◇]	SLEEP Sleep / Timer
[=I]	TITLE SOUND Sound / Title
[=i]	MEDIA DISPLAY Display / Media
[=]/[ =]	GOTO TEXT Text / Goto
<< VCR	TUNE- << / Tune-
Play VCR	SLOW Play / Slow
>> VCR	TUNE+ >> / Tune+
Pause VCR	STEP - FREEZE Pause / Step / Freeze
Stop VCR	HOLD Stop / Hold
Rec VCR	REC MODE Rec / Rec Mode
CH+ VCR	SHIFT + CH PAGE Shift + CH+ /
CH- VCR	SHIFT + CH PAGE Shift + CH- /

Original	Replacement

