

 


 



 




 


 



 


 

 
 






 




 

 

 

 
 
 

 



 



 

 





 




Original	Replacement	Original	Replacement
 Power On	 Power	 Stop	 Stop
 Standby	 Shift + Power	 </Pause	 Pause
 Input	 AV	 >> /Preset+	 >>
 Mute	 Mute	  <</Preset-	  <<
 Vol Up	 Shift + Right	 >>/Tune+	 >>
 Vol Down	 Shift + Left	 <</Tune-	 <<
 Volume+	 Vol +	 Setup/Home	 Media
 Volume-	 Vol -	 Test/Disc Menu	 Menu
 T/V/CH Level	 Smart	 Dimmer/Return	 Back
 CH/Album Up	 Ch +	 Display	 Info
 CH/Album Down	 Ch -	 RDM/Room2	 Exit
 Up	 Up	 Audio	 Options
 Down/Search	 Down	 Surround/Play List >	 Green
 Sel >	 Right	 < Surround/Play List	 Red
 < Sel	 Left	 Stereo/Play M	 TV/R
 Enter	 Ok	 1 / Tuner	 1
 Play	 Play	 2 / CD	 2








 



 









 











 


 
 

 
 
 
 

 

 
 
 
 
 
 
 
 
 



 


 
Original		Replacement	
	3 / F.Aux		3
	4 / Tape		4
	5 / BT In		5
	6 / Video 1		6
	7 / Video 2		7
	8 / Video 3		8
	9		9
	0		0
	10		Guide
	Ext In		Blue
	Sleep		Sleep
	AVR		Shift + 1
	Dock		Shift + 2
	CD		Shift + 3
	AUX		Shift + 4
	BD		Shift + 5
	TV		Shift + 6

Original		Replacement	
	SAT		Shift + 7
	CBL		Shift + 8











 








 









 

 
 





Original	Replacement	Original	Replacement
 Power On	 Power	 Audio	 Dual
 Standby	 Shift + Power	 Subtitle	 Subt
 Up	 Up	 1	 1
 Down	 Down	 2	 2
 Right	 Right	 3	 3
 Left	 Left	 4	 4
 Enter	 Ok	 5	 5
 Setup/Home	 Media	 6	 6
 Test/Disc Menu	 Menu	 7	 7
 Play	 Play	 8	 8
 Stop	 Stop	 9	 9
 >>	 >>	 0	 0
 <<	 <<		
 I<<	 I<<		
 >>I	 >>I		
 Display	 Info		
 Dimmer/Return	 Back		





	Original	Replacement	Original	Replacement
	CD			Power
	Play			Play
	Stop			Stop
	Pause			Pause
	I<<			I<<
	>>I			>>I
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0







Original	Replacement	Original	Replacement
 Power On	 Power	 Audio	 Options
 Standby	 Shift + Power	 < Surround/Play List	 Red
 RDM/Room2	 Exit	 Surround/Play List >	 Green
 CH/Album Up	 Ch +	 Stereo/Play M	 TV/R
 CH/Album Down	 Ch -	 Sleep / Dock M.	 Sleep
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 >>	 >>		
 <<	 <<		
 I<<	 I<<		
 >>I	 >>I		
 Test/Disc Menu	 Menu		
 Display	 Info		
 Enter	 Ok		
 Up	 Up		
 Down	 Down		

