



Original	Replacement	Original	Replacement
	Power		Power
	Eject		Eject / Surround
	Tv/Radio		TV/Radio /
	Red/Goto		Red / Netflix / Search
	Red/Goto	+	Shift + Text /
	Green/Angle		Info / Angle
	Green/Angle		Green / APP / Repeat
	Yellow/Repeat	+	Shift + Green / APP /
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B	+	Shift + Blue / Prime
	Blue/A-B		Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	Text		Text / Goto
	Freeze/Hold	+	Shift + Stop /
	Freeze/Hold	+	Shift + Pause / Step /
	EPG		Guide / EPG / -/--
	D.Menu		D.Menu / Top
	Subtitle		Subtitle / EQ
	Zoom/Size		Zoom / Size
	Aspect	+	Shift + Picture / Format
	Subpage	+	Shift + Subtitle / EQ
	Media	+	Shift + Display / Media
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	D.Setup		Setup / OPT /
	Stop		Stop / Hold
	I<<		I<< / Preset-
	I>>		I>> / Preset+
	I>>		Smart / List
	Menu		Menu / Home
	Lang/Audio		Audio / Lang I/II





Original	Replacement
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Title/Exit	 Shift + Sound / Title
 Title/Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title

