


















































 











Original	Replacement	Original	Replacement
On/Off	 Power	Menu video	 D.Menu / Top
Mute	 Mute / Dimmer	Store	 Setup / OPT /
Reveal	 Play / Slow	Text	 Text / Goto
Update	 Pause / Step / Freeze	Input	 AV / Input / RDS
Txt Stop	 Stop / Hold	Menu	 Menu / Home
Tone-	 << / Tune-	Menu Up	 Up
Tone+	 >> / Tune+	Info	 Info / Angle
Contrast-	 I<< / Preset-	Menu Left	 Left
Contrast+	 >>I / Preset+	OK Enter	 OK
Color- S.Std	 Sound / Title	Menu Right	 Right
Menu audio	 Audio / Lang I/II	Menu Off	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Surround	 Eject / Surround	Swap	 Back / Return
Color+ P.Std	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	Output	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-



Original	Replacement	Original	Replacement
Disp	 Display / Media	Blue	 Blue / Prime Video / Random
Chan.Down	 CH- / Page-	Tune-	 Shift + << /
1	 1	Tune+	 Shift + >> /
2	 2	Bright- Sys	 Shift + I<< / Preset-
3	 3	Bright+ Mode	 Shift + >>I / Preset+
4	 4	Nicam/Mono	 Shift + Audio / Lang I/II
5	 5	Mix Scan	 Shift + Text /
6	 6	TV/AV	 Shift + AV / Input / RDS
7	 7	Level L	 Shift + Left
8	 8	Aft/Caf	 Shift + OK
9	 9	Level R/Woofers	 Shift + Right
Guide -/-- 1.	 Guide / EPG / -/--	Back	 Shift + Back / Return
0/10	 0	Audio+	 Shift + Vol+
2.Fav P/C 2.	 Fav / Marker / PC	Audio-	 Shift + Vol-
Red	 Red / Netflix / Search	Display	 Shift + Display / Media
Green	 Green / APP / Repeat	Search	 Shift + Red / Netflix /
Yellow	 Yellow / YouTube / Repeat		

