








 



 



 



 



 



 


 




 












 




 

 
















Original		Replacement		Original		Replacement	
	Power		Power		Bumper		P/C / FAV
	Image Mode		V-FOR		Input Source		SRC
	Sound Mode		Audio		Up		UP
	Display Mode		WIDE		Down		DOWN
	1		1		Right		RIGHT
	2		2		Left		LEFT
	3		3		OK		OK
	4		4		Back		BACK
	5		5		Menu		MENU
	6		6		CH+		CH +
	7		7		CH-		CH -
	8		8		Mute		MUTE
	9		9		Vol+		VOL +
	0		0		Vol-		VOL -
	Alternately		-/-- / EPG		Red		Red (A)
	Screen Display		INFO		Green		Green (B)
	Home		VOD		Yellow		Yellow (C)





Original	Replacement	Original	Replacement
 Blue	 Blue (D)		

