


 
 
 



 
 





 










 

 

 
 

 


 

 



 
 





 

 

 




Original	Replacement
 Power	 Power
 Clock Timer	 3D
 Clock Timer Set	 Options
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 >10	 Guide
 Clear	 Exit
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 Sleep	 Sleep
 Enter	 Ok
 Tuner Memory	 TV/R
 Display	 Info
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 >>I/Preset+	 >>I
 I<</Preset-	 I<<
 >>/Tuning+	 >>
 <</Tuning-	 <<
 Album+	 Ch +
 Album-	 Ch -
 Bass/Treble	 Dual
 DSG	 Smart
 Function	 Menu

