



Original	Replacement

Original	Replacement







 













 





 

 

 







Original		Replacement	
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	>10		Guide / EPG / -/--
	0		0
	Repeat		Green / APP / Repeat
	Play Mode		Shift + Play /
	Stereo/Mono		Shift + Audio / Lang I/II
	Function		Shift + Setup / OPT / Tools
	DVD Top Menu		Shift + Menu /
	Sound Field+		Shift + Vol+
	Night Mode		Shift + Smart / List
	Sound Field-		Shift + Vol-

Original		Replacement	
	Enter1		Shift + 1
	DVD Display		Shift + 2





Original	Replacement	Original	Replacement
 Power Tv	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0/10	 0		
 -/--	 Guide / EPG / -/--		
 Enter	 OK		
 Tv Vol+	 Vol+		
 Tv CH+	 CH+ / Page+		
 Tv Vol-	 Vol-		
 Tv CH-	 CH- / Page-		

