



 







 

 







 

 













 




 

 





	Original	Replacement
	Display	 Display / Media
	Power	 Power
	Function-	 +  Shift + Down
	Function+	 +  Shift + Up
	Sound	 Sound / Title
	Menu	 Menu / Home
	Timer	 Sleep / Timer
	Up	 Up
	Folder-	 CH- / Page-
	OK	 OK
	Folder+	 CH+ / Page+
	Down	 Down
	Return	 Back / Return
	Clear	 Exit / Cancel / Clear
	I<</Preset-	 I<< / Preset-
	Play	 Play / Slow
	Pause	 Pause / Step / Freeze

	Original	Replacement
	>>I/Preset+	 >>I / Preset+
	<</Tuning-	 << / Tune-
	Stop	 Stop / Hold
	>>/Tuning+	 >> / Tune+
	Vol+	 Vol+
	Vol-	 Vol-

