



 

 

 

 



 

 

 


 

 
 
 
 

 
 












| Original | Replacement |
|---|--|
|  Power |  Power |
|  Input |  AV |
|  Power Tv |  Shift + Power |
|  Input Tv |  Shift + AV |
|  Tv Vol+ |  Shift + Vol + |
|  Tv Vol- |  Shift + Vol - |
|  Tv CH+ |  Shift + Ch + |
|  Tv CH- |  Shift + Ch - |
|  Sound Field + |  Ch + |
|  Sound Field - |  Ch - |
|  STD |  Options |
|  Movie |  Dual |
|  Game |  Media |
|  Music |  List |
|  P.Audio |  Smart |
|  Stereo |  Subt |
|  Speaker/Tv↔Audi |  TV/R |

| Original | Replacement |
|--|---|
|  Display |  Info |
|  Return |  Back |
|  AMP Menu |  Menu |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Muting |  Mute |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  OK |  Ok |
|  I<< |  I<< |
|  Pause |  Pause |
|  >>I |  >>I |
|  << |  << |
|  Play |  Play |
|  >> |  >> |





| Original | Replacement | Original | Replacement |
|---|--|----------|-------------|
|  Stop |  Stop | | |
|  Pairing |  Pre Ch | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

