







 

 

 
 

 



 


 



 





 




 







 



 



 














 

 



 



















 

 













Original		Replacement		Original		Replacement	
	Power		Power		Recall		Back / Return
	Mute		Mute / Dimmer		Display		Display / Media
	Nicam/A2		Shift + Audio / Lang I/II		Freeze		Pause / Step / Freeze
	Aspect		Shift + Picture / Format		Rec/Auto		Rec / Rec Mode
	P.Mode		Picture / Format		Red		Red / Netflix / Search
	S.Mode		Sound / Title		Green		Green / APP / Repeat
	1		1		Yellow		Yellow / YouTube / Repeat
	2		2		Blue		Blue / Prime Video / Random
	3		3		Sleep		Sleep / Timer
	4		4		Up		Up
	5		5		Source		AV / Input / RDS
	6		6		Left		Left
	7		7		Enter		OK
	8		8		Right		Right
	9		9		Down		Down
	Shift + Guide / EPG / -/-		Shift + Guide / EPG / -/-		Menu		Menu / Home
	0		0		Exit		Exit / Cancel / Clear





Original		Replacement		Original		Replacement	
	CH+		CH+ / Page+		DTV		Smart / List
	Subtitle		Subtitle / EQ		EPG		Guide / EPG / -/-
	Vol+		Vol+		Tv/Radio		TV/Radio /
	CH-		CH- / Page-				
	T.Shift		Setup / OPT /				
	Vol-		Vol-				
	Play/Pause/Hold		Play / Slow				
	Play/Pause/Hold		Shift +				
	Play/Pause/Hold		Stop /				
	<</Reveal		<< / Tune-				
	>>/Size		Zoom / Size				
	>>/Size		>> / Tune+				
	Stop/Index		Stop / Hold				
	I<<		I<< / Preset-				
	S.Page/>>I		>>I / Preset+				
	Text		Text / Goto				
	FAV		Fav / Marker / PC				
	Audio		Audio / Lang I/II				

