



Original	Replacement
	 Power
	 Eject / Surround
	 Subtitle / EQ
	 1
	 2
	 3
	 Info / Angle
	 4
	 5
	 6
	 Audio / Lang I/II
	 7
	 8
	 9
	 Display / Media
	 Sleep / Timer
	 Guide / EPG / -/--

Original	Replacement
	 0
	 Smart / List
	 Sound / Title
	 TV/Radio /
	 Exit / Cancel / Clear
	 Setup / OPT /
	 Up
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 Menu / Home
	 Picture / Format
	 << / Tune-
	 Pause / Step / Freeze
	 Play / Slow





Original		Replacement	
	>>		>>  / Preset+
	>>		>> / Tune+
	Stop		Stop / Hold
	<<		<< / Preset-
	Zoom		Zoom / Size
	Step		Shift + Pause / Step /
	Slow		Shift + Play /
	Vol+		Vol+
	Mute		Mute / Dimmer
	3D		Shift + 3
	Ran		D.Menu / Top
	Vol-		Vol-
	N/P		Red / Netflix / Search
	R/L		Blue / Prime Video / Random
	A/B		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat

Original		Replacement	

