

 






 

 
 
 
 

 
 






 



 









 

 

 

 

 




 


 






Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep
 Mute	 Mute	 Vol +	 Vol +
 1	 1	 Vol -	 Vol -
 2	 2	 Menu	 Menu
 3	 3	 Exit	 Exit
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 Enter	 Ok
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 Source	 AV
 0	 0	 EPG	 Guide
 FAV	 Pre Ch	 Nicam	 Options
 Recall	 Back	 P.Mode	 Shift + Format
 CH +	 Ch +	 S.Mode	 Shift + Dual
 CH -	 Ch -	 P.Size	 Format
 Display	 Info	 Red / Goto	 Red





Original	Replacement	Original	Replacement
Green / Slow	Green	S.Title	Subt
Yellow / Repeat	Yellow	Audio	Dual
Yellow / Repeat	+ Shift + Text	Freeze	+ Shift + Pause
Blue / A-.B	Blue	Radio	TV/R
Media	Media	3D	3D
Play/Pause / Text	Play		
Play/Pause / Text	Pause		
Play/Pause / Text	Text		
Stop / Index	Stop		
Rec / PVR	Rec		
I<< / Hold	I<<		
>>I / Size	>>I		
<< / S.Page	<<		
>> / Reveal	>>		
FAV +	+ Shift + Up		
FAV -	+ Shift + Down		
Auto	Smart		

