


 


 



 






 







 
 
 
 





Original	Replacement	Original	Replacement
	Power		Power
	TV/AV		AV
	TV/TXT		Text
	Cancel		Eject
	Reveal		Options
	DTV		Smart
	Hold		Media
	Size		Format
	Subpage		D. Menu
	Index		3D
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Channel List		List
	EPG		Guide
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1
	2		2
	3		3
	4		4
	5		5





	Original	Replacement		Original	Replacement
	6		6		>>I
	7		7		Play
	8		8		Pause
	9		9		
	0		0		
	FAV		Pre Ch		
	Recall		Back		
	Picture		Shift + Format		
	Sound		Shift + Dual		
	Nicam/A2		Dual		
	Sleep		Sleep		
	Subtitle		Subt		
	Tv/Radio		TV/R		
	<<		<<		
	>>		>>		
	Repeat		Shift + Text		
	I<<		I<<		

