 

 











 

 



 

 

 



 



 

 

 

 

 

 

 





 

 

 

 



 

 





 
 

 








Original		Replacement		Original		Replacement	
	Power		Power		3		3
	Mute		Mute / Dimmer		4		4
	P.Mode		Picture / Format		5		5
	S.Mode		Sound / Title		6		6
	Pic. Size		Zoom / Size		7		7
	Play / Pause		Play / Slow		8		8
	Play / Pause		Pause / Step / Freeze		9		9
	<<		<< / Tune-		-/--		Shift + Guide / EPG / -/--
	>>		>> / Tune+		0		0
	Stop		Stop / Hold		Return		Back / Return
	I<<		I<< / Preset-		CH+		CH+ / Page+
	>>I		>>I / Preset+		Display		Display / Media
	Nicam / A2		Shift + Audio / Lang I/II		Vol+		Vol+
	Rec PVR		Rec / Rec Mode		CH-		CH- / Page-
	Media		Smart / List		EPG		Guide / EPG / -/--
	1		1		Vol-		Vol-
	2		2		TV Menu		Menu / Home





Original	Replacement	Original	Replacement
	Up		Green / APP / Repeat
	Sleep		Yellow / YouTube / Repeat
	Left		Blue / Prime Video / Random
	Enter		Fav / Marker / PC
	Right		Shift + Down
	AV / Input / RDS		Shift + Up
	Down		TV/Radio /
	Exit / Cancel / Clear		
	Text / Goto		
	Shift + Stop /		
	Info / Angle		
	Subtitle / EQ		
	Audio / Lang I/II		
	Shift + Zoom /		
	Eject / Surround		
	D.Menu / Top		
	Red / Netflix / Search		

