 

 






 
 




 

 

 

 



 


 
 


 
 
 


 
 

 

 
 

 

 

 
 
 
 
 
 

 
 
 

 



 
 


 
 
 
 
 

 
 

 





 


 

 
 

 
 


 
 
 

 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 >>	 >>
 Power AMP	 +  Shift + Power	 Preset+	 Ch +
 CD	 Red	 Preset-	 Ch -
 Recorder	 Green	 Pure Direct/Favorite	 Pre Ch
 Network	 Yellow	 Vol+	 Vol +
 Phono	 Blue	 Vol-	 Vol -
 AUX	 Home Smart	 Mute	 Mute
 Tuner	 App Media	 Info	 Info
 Internet Radio Preset 1	 +  Shift + 1	 Mode	 Format
 Internet Radio Preset 2	 +  Shift + 2	 Source	 AV
 Internet Radio Preset 3	 +  Shift + 3	 Menu	 Menu
 Play	 Play	 Up	 Up
 Pause	 Pause	 Down	 Down
 I<<	 I<<	 Right	 Right
 >>I	 >>I	 Left	 Left
 Stop	 Stop	 Enter	 Ok
 <<	 <<	 1	 1

 





 


 


 
 
 




 
 


 

 
 







Original		Replacement		Original		Replacement	
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	+10		Guide				
	Clear		Exit				
	Random		Options				
	Repeat		Text				
	Search/Program		Sleep				
	Dimmer		Dual				






Original		Replacement		Original		Replacement	
	Power		Power		Pure Direct/Favorite		Pre Ch
	Power AMP		Shift + Power		Vol+		Vol +
	CD		Red		Vol-		Vol -
	Recorder		Green		Mute		Mute
	Network		Yellow		Info		Info
	Phono		Blue		Mode		Format
	AUX		Smart		Source		AV
	Tuner		Media		Menu		Menu
	Play		Play		Up		Up
	Pause		Pause		Down		Down
	I<<		I<<		Right		Right
	>>I		>>I		Left		Left
	Stop		Stop		Enter		Ok
	<<		<<		1		1
	>>		>>		2		2
	Preset+		Ch +		3		3
	Preset-		Ch -		4		4





Original		Replacement		Original		Replacement	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	+10		Guide				
	Clear		Exit				
	Random		Options				
	Repeat		Text				
	Search/Program		Sleep				
	Dimmer		Dual				

