


 
 
 

 

 

 
 

 
 












 


 
 
 

 
 
 
 
 
 
 


 
 







Original	Replacement	Original	Replacement
 POWER	 Power	 ≧10 / -/-	 Guide
 TV	 TV/R	 Cancel	 Exit
 VCR / AUX	 Shift + TV/R	 CH +	 Ch +
 SLEEP	 Sleep	 CH -	 Ch -
 TV / AV	 AV	 VOL +	 Vol +
 TUNER / BAND	 Smart	 VOL -	 Vol -
 DVD / CD	 Media	 SKIP PREV.	 I<<
 1	 1	 SKIP NEXT	 >>I
 2	 2	 SLOW/SEARCH	 <<
 3	 3	 SLOW/SEARCH	 >>
 4	 4	 STOP	 Stop
 5	 5	 PAUSE	 Pause
 6	 6	 PLAY	 Play
 7	 7	 TOP MENU / DIR. NAV.	 D. Menu
 8	 8	 MENU / PLAY LIST	 Menu
 9	 9	 UP	 Up
 0	 0	 LEFT	 Left





Original	Replacement	Original	Replacement
 ENTER	 Ok	 SETUP	 Options
 RIGHT	 Right	 MUTE	 Mute
 DOWN	 Down	 FL DISPLAY	 Shift + Info
 DISPLAY / TV VOL-	 Info	 PAGE	 Shift + 2
 DISPLAY / TV VOL-	 Shift + Vol -	 GROUP	 Shift + 3
 RETURN / TV	 Shift + Vol +	 REPEAT	 Text
 RETURN / TV	 Back	 PLAY MODE	 Shift + Play
 SUBWOOFER	 3D	 TEST	 Yellow
 SFC	 Green	 CH. SELECT	 List
 C. FOCUS	 Shift + 1	 QUICK REPLAY	 Blue
 SUPER SRND.	 Format	 SUBTITLE	 Subt
 DOLBY PL. II	 Dual		
 Mix 2CH	 Shift + Subt		
 C. S. M.	 Red		
 POSITION	 Pre Ch		
 AUDIO	 Shift + Dual		
 ZOOM	 Eject		












 
 



 













 
 












Original	Replacement
Power	Power
Power AV	+ Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
≥10 / -/-	GUIDE Guide
TV/AV	TIMER AV AV
CH+	+ CH Ch +
CH-	CH - Ch -
Tv Vol+	+ VOL Vol +

Original	Replacement
Tv Vol-	Vol -





Original	Replacement
	
Power	Power
	
Power AV	Shift + Power
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
=10 / -/-	Guide
	
>>	>>
	
<<	<<
	
<<<	<<<
	
>>>	>>>

Original	Replacement
	
Pause	Pause
	
Play	Play
	
Stop	Stop

