
 
 


 



 

 


 
 
 
 
 




 
 




 






Original	Replacement	Original	Replacement
On/Off	 Power	Exit	 Exit
Audio Out	 Mute	Menu Down	 Down
Stop	 Stop	T.Set/Clock	 Back
Slow Down	 Ch -	Next	 >>
Pause	 Pause	Audio	 Dual
Slow/Dpss-	 Subt	Prev.	  <<
Auto/Track	 Sleep	1	 1
Mon/TV	 TV/R	2	 2
Video/Go-To	 D. Menu	3	 3
Sp/Lp/Speed	 Text	4	 4
VCR/TV	 AV	5	 5
Menu	 Menu	6	 6
Menu Up	 Up	7	 7
Display	 Info	8	 8
Menu Left	 Left	9	 9
OK Enter	 Ok	-/--	 Guide
Menu Right	 Right	0	 0



Original	Replacement	Original	Replacement
Progr/C/CH	 Pre Ch		
Counter Stop	 Red		
Counter Clock	 Yellow		
Counter Reset	 Green		
Rewind	 <<		
Play	 Play		
F.Forward	 >>		
Record	 Rec		
Show View	 Smart		
Vps/Pdc	 +  Shift + Pre Ch		
Audio Dub	 +  Shift + Red		
Encode	 +  Shift + Green		
X2 Rew/Play	 +  Shift + Yellow		
P.Back/R.+Play	 Blue		

