




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	FAV		Fav / Marker / PC
	Vol+		Vol+
	MTS I/II		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Sub-T		Subtitle / EQ
	CH-		CH- / Page-
	Aspect		Shift + Picture / Format
	Freeze		Shift + Pause / Step /
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





Original	Replacement	Original	Replacement
Exit	Exit / Cancel / Clear	List	Smart / List
Red	Red / Netflix / Search	T.Shift	TV/Radio /
Green	Green / APP / Repeat	USB	Shift + 8
Yellow	Yellow / YouTube / Repeat	EPG	Guide / EPG / -/--
Blue	Blue / Prime Video / Random		
<< / Text/CC	<< / Tune-		
<< / Text/CC	Text / Goto		
Play/Pause /	Play / Slow		
Play/Pause /	Pause / Step / Freeze		
>> / Reveal	>> / Tune+		
<< / Hold	<< / Preset-		
<< / Hold	Shift + Stop /		
>> / Size	>> / Preset+		
>> / Size	Zoom / Size		
Stop / Index	Stop / Hold		
Root	Info / Angle		
Repeat	Shift + Green / APP / Repeat		

