


 
 

 

 
 

 
 
 
 
 
 
 
 

 











 
 
 
 
 


 
 

 
 
 

 

 
 
 
 

 
 
 
 
 

 


 
 
 
 

 
 
 
 
 
 

 

 

 


 

 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Mute		Mute
	Guide/Top		Media
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[<>]		Format
	←[/]→		3D
	Subtitle		Subt



 




 


 

 
 
 
 


 
 
 
 

 

 

 


 



 

 

 
 

 
 
 
 

 
 
 



 





 



 




 




Original	Replacement	Original	Replacement
 Text	 Text		
 II/II>/[▼]	 Pause		
 [i+]/[≡i]	 Info		
 O)I/II	 Dual		
 Stop	 Stop		
 Play/[≡o]	 Play		
 Eject	 Eject		
 I<</[≡?]	 I<<		
 <</[≡+]	 <<		
 >>/[≡♦]	 >>		
 >>I/[O]/[≡X]	 >>I		
 AD	 Shift + Subt		
 Audio	 Shift + Dual		

 


 




Original		Replacement		Original		Replacement	
	←[/]→		3D		Menu/DVD		Menu
	Power		Power		Tv/FAV/Radio/Set		TV/R
	1		1		Guide/Top		Guide
	2		2		[<>]		Format
	3		3		Text		Text
	4		4		Subtitle		Subt
	5		5		O) /II		Dual
	6		6		[i+]/[≡i]		Info
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	Source		AV		Left		Left
	Mute		Mute		/ >/[▼]		Pause
	Vol+		Vol +		Play/[≡o]		Play
	Vol-		Vol -		Stop		Stop
	Exit/Return		Exit		Eject		Eject





 








 
 

 



 



 

 

 
 
 



 



 


Original	Replacement	Original	Replacement
 <</[≡?]	 <<		
 <</[≡+]	 <<		
 >>/[≡◆]	 >>		
 >> /[O]/[≡X]	 >>		
AUDIO TEXT	 +  Shift + Dual		

Original	Replacement





Original	Replacement	Original	Replacement
	Power		Power
	←[/]→		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +

Original	Replacement	Original	Replacement
	P-		Ch -
	Mute		Mute
	Guide/Top		Guide
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	[<>]		Format





Original	Replacement	Original	Replacement
[i+]/[≡i]	DISPLAY INFO Info		
II/II>/[▼]	II Pause		
SUBTITLE Subtitle	AD SUBT Subt		
O)I/II	SOUND DUAL Dual		
Play/[≡o]	PLAY MODE Play		
CD/I/	Stop		
SUBTITLE Eject	ZOOM Eject		
I<</[≡?]	I<< I<<		
<</[≡+]	<< <<		
>>/[≡◇]	>> >>		
>>I/[O]/[≡X]	>>I >>I		
AUDIO TEXT Audio	SHIFT + SOUND DUAL Shift + Dual		
AD AD	SHIFT + AD SUBT Shift + Subt		

