



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Up	 Up
 Play	 Play / Slow	 i	 Info / Angle
 Pause	 Pause / Step / Freeze	 Left	 Left
 Stop	 Stop / Hold	 OK	 OK
 Rec	 Rec / Rec Mode	 Right	 Right
 <<	 << / Tune-	 Exit	 Exit / Cancel / Clear
 >>	 >> / Tune+	 Down	 Down
 Lang	 Audio / Lang I/II	 Back	 Back / Return
 Source (Games)	 Eject / Surround	 Vol+	 Vol+
 Movie-Music-Phot	 Picture / Format	 World (Violet)	 Smart / List
 [≡]..	 Zoom / Size	 PR+	 CH+ / Page+
 */O	 Sleep / Timer	 Vol-	 Vol-
 TV	 TV/Radio /	 */Q	 Display / Media
 Q.Menu	 D.Menu / Top	 PR-	 CH- / Page-
 [-O-]	 Setup / OPT /	 1	 1
 [≡]/Text	 Text / Goto	 2	 2





Original	Replacement	Original	Replacement
 3 def	3	 <b>3</b>	3
 4 ghi	4	 <b>4</b>	4
 5 jkl	5	 <b>5</b>	5
 6 mno	6	 <b>6</b>	6
 7 pqrs	7	 <b>7</b>	7
 8 tuv	8	 <b>8</b>	8
 9 wxyz	9	 <b>9</b>	9
 Guide	Guide	 <b>GUIDE EPG</b>	Guide / EPG / -/--
 0	0	 <b>0</b>	0
 Red	Red	 <b>NETFLIX SEARCH</b>	Red / Netflix / Search
 Green	Green	 <b>APP REPEAT</b>	Green / APP / Repeat
 Yellow	Yellow	 <b>YouTube REPEAT A-B</b>	Yellow / YouTube / Repeat
 Blue	Blue	 <b>Prime Video RANDOM</b>	Blue / Prime Video / Random
 Recall	Recall	 <b>SHIFT + RETURN BACK</b>	Shift + Back / Return

Original	Replacement

