 

 









 

 
 


 







 







 





 






 


 



 



 



 









Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		P-		CH- / Page-
	1		1		Menu		Menu / Home
	2		2		Quick		Shift + Exit / Cancel / Clear
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		OK
	6		6		Right		Right
	7		7		Back		Back / Return
	8		8		Down		Down
	9		9		Exit		Exit / Cancel / Clear
	List		Smart / List		[i+]		Info / Angle
	0		0		[>]		Shift + Right
	Recall		Shift + Back / Return		Guide		Guide / EPG / -/-
	Vol+		Vol+		*/O		Setup / OPT /
	Mute		Mute / Dimmer		*/Q		Shift + Setup / OPT / Tools
	P+		CH+ / Page+		Text		Text / Goto





Original		Replacement		Original		Replacement	
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	O)I/II		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	[+ +]		Display / Media				
<< button icon"/>	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
>> button icon"/>	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

