



Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DVD RTN		Shift + 2
	Input		AV / Input / RDS
	Audio A/D		Audio / Lang I/II
	Mute		Mute / Dimmer
	Vol +		Vol+
	Vol -		Vol-
	P +		CH+ / Page+
	P -		CH- / Page-
	Menu / DVD		Menu / Home
	Exit / Back		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	Guide / Top Menu		D.Menu / Top
	Guide / Top Menu		Shift + D.Menu / Top Menu
	TV Fav/Radio / Setup		TV/Radio /
	TV Fav/Radio / Setup		Shift + TV/Radio / Program
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random









 

 

 

 





 











 



 

 



 







 

 

 

 

 

 

 

 

 





Original	Replacement
Video Format	Shift + 4
Aspect	Picture / Format
Index i+	Info / Angle
Text / Mix	Text / Goto
Open/Close / Subtitle	Eject / Surround
Open/Close / Subtitle	Shift + Eject / Surround
Stop / Dual I/II	Stop / Hold
Stop / Dual I/II	Shift + Stop /
Play	Play / Slow
Pause / Step / [V]	Pause / Step / Freeze
I<< / Reveal	I<< / Preset-
<< / Hold	Shift + << /
<< / Hold	<< / Tune-
>> / Size	Shift + >> /
>> / Size	>> / Tune+
>>I / Cancel	Shift + >>I / Preset+
>>I / Cancel	>>I / Preset+

Original	Replacement





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit / Back		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Top Menu		D.Menu / Top
	Down		Down
	Set Up		Setup / OPT /
	[<>]		Picture / Format
	→ / ←		Display / Media
	[i+]/[≡i]		Info / Angle
	Text/Audio		Text / Goto
	Open/Close/Subtit		Eject / Surround
	Stop/O /I		Stop / Hold
	Play/[≡o]		Play / Slow
	Pause/Step/[▽]		Pause / Step / Freeze
	I<</[≡?]		I<< / Preset-
	<</[≡+]		<< / Tune-





Original	Replacement	Original	Replacement
	>> / Tune+		
	>> I / Preset+		

