




 






 


 








 







 
 




























 

 





Original	Replacement	Original	Replacement
 Open / Close	 Eject / Surround	 0	 0
 Input Select	 AV / Input / RDS	 Clear	 Exit / Cancel / Clear
 HDMI	 Shift + 0	 Info	 Info / Angle
 Power	 Power	 Text	 Text / Goto
 1	 1	 VCR	 Shift + 4
 2	 2	 DVD	 Shift + 2
 3	 3	 Guide	 Guide / EPG / -/-
 Prog +	 CH+ / Page+	 Top Menu	 Shift + D.Menu / Top Menu
 4	 4	 Up	 Up
 5	 5	 Disc Menu	 D.Menu / Top
 6	 6	 Left	 Left
 Prog -	 CH- / Page-	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Display	 Display / Media
 9	 9	 Down	 Down
 Timer Prog	 Zoom / Size	 Return	 Back / Return
 Setup	 Setup / OPT /	 Red	 Red / Netflix / Search





Original

Replacement

	Green		Green / APP / Repeat
	Yellow / Mode		Yellow / YouTube / Repeat
	Blue / Search		Blue / Prime Video / Random
	<< REV		<< / Tune-
	Play		Play / Slow
	>> FWD		>> / Tune+
	I<< Skip		I<< / Preset-
	Stop		Stop / Hold
	>>I Skip		>>I / Preset+
	Pause		Pause / Step / Freeze
	Instant Skip		Shift + Back / Return
	Sat Link		TV/Radio /
	Time Slip		Shift + Sleep / Timer
	Dubbing		Smart / List
	Rec Mode		Shift + Rec / Rec Mode
	Rec		Rec / Rec Mode
	Subtitle		Subtitle / EQ

Original

Replacement

	Audio		Audio / Lang I/II
	Time Set		Sleep / Timer

