





 





















 


 



Original	Replacement
	Mute / Dimmer
	Shift + Pause / Step /
	Audio / Lang I/II
	Power
	Smart / List
	Sleep / Timer
	Picture / Format
	Display / Media
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Replacement
	AV / Input / RDS
	0
	Back / Return
	Setup / OPT /
	Sound / Title
	Up
	CH+ / Page+
	Vol-
	Left
	Menu / Home
	OK
	Right
	Vol+
	CH- / Page-
	Down
	Text / Goto
	Subtitle / EQ





	Original	Replacement	Original	Replacement
	[/=]	 TV/Radio /		
	<</[...]	 << / Tune-		
	>>/[?]	 >> / Tune+		
	[X]	 Fav / Marker / PC		
	Red/↑	 Red / Netflix / Search		
	Green/←	 Green / APP / Repeat		
	Yellow/→	 Yellow / YouTube / Repeat		
	Blue/Enter/H.Lock	 Blue / Prime Video / Random		
	White/↓/CH.List	 Guide / EPG / -/--		
	Pause/Timer	 Pause / Step / Freeze		
	[♦]/Zoom	 Zoom / Size		
	Exit	 Exit / Cancel / Clear		

