 
 

 
 






 









 

 
 











 




Original	Replacement
 Power	 Power
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu	 Menu
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source	 AV
 Play	 Play
 Pause	 Pause
 Stop/Prog	 Stop
 Display	 Info
 Intro	 Smart
 Random	 Media

Original	Replacement
 Mode	 Options
 S-Bass	 Dual
 P-EQ	 TV/R
 Loudness	 Format
 Clock	 Shift + AV
 DIM	 Subt
 Sleep/Timer	 Sleep

