
 

 




 








 






 
 



















 













 





 

 




Original		Replacement		Original		Replacement	
	PLII PARA.		D. Menu		Display / Sleep		Sleep
	Adjust -		Shift + Down		Return /		Back
	DSP -		Shift + Left		Stop / P.Scan		Stop
	Power		Power		<< / Tune -		<<
	CH/Level Up		Ch +		>> / Tune +		>>
	CH/Level Down		Ch -		I<< / Preset -		I<<
	Vol+		Vol +		>>I / Preset +		>>I
	Vol-		Vol -		1 / Tuner		1
	Mute		Mute		2 / CD		2
	Up / PTY Select		Up		3 / AUX		3
	Down / Search M.		Down		4 / Tape		4
	Right / EON PTY		Right		5		5
	Left / EON TA		Left		6 / Video 1		6
	Enter / RDS		Ok		7 / Video 2		7
	Setup / OSD		Options		8 / Video 3		8
	Menu / T.Tone		Menu		9		9
	Display / Sleep		Info		0		0





Original	Replacement
Adjust +	Shift + Up
7CH Dir	3D
CH Sel / T/V	TV/R
SPK SET	Exit
Auto	Subt
DSP +	Shift + Right
Stereo	Dual
CD	Green
AUDIO	Red
AUX	Yellow
TV	Blue
VCR	Shift + Red
SAT	Shift + Blue
CABLE	Shift + Yellow
DVD	Shift + Green
AUX Power /	Shift + Power
AUX Rec	Shift + Rec

Original	Replacement
AUX Pause	Shift + Pause
AUX Play	Shift + Play
AUX Stop / P.Scan	Shift + Stop
AUX << / Tune	Shift + <<
AUX >> / Tune	Shift + >>
AUX >>  / Preset	Shift + >>
AUX  << / Preset -	Shift +  <<







Original	Replacement
AUDIO	<b>A</b> Red
CD	<b>B</b> Green
AUX	<b>C</b> Yellow
TV	<b>D</b> Blue
VCR	SHIFT + <b>A</b> Shift + Red
DVD	SHIFT + <b>B</b> Shift + Green
CABLE	SHIFT + <b>C</b> Shift + Yellow
SAT	SHIFT + <b>D</b> Shift + Blue
TV Power	<b>Power</b> Power
TV CH/Level +	<b>+</b> Ch +
TV CH/Level -	<b>-</b> Ch -
TV CH Sel. / T/V	<b>Media</b> Media
TV Mute	<b>MUTE</b> Mute
TV Volume +	<b>+</b> Vol +
TV Volume -	<b>-</b> Vol -
TV 1	<b>1</b> 1
TV 2	<b>2</b> 2

Original	Replacement
AUX TV 3	<b>3</b> 3
TAPE TV 4	<b>4</b> 4
TV 5	<b>5</b> 5
VIDEO1 TV 6	<b>6</b> 6
VIDEO2 TV 7	<b>7</b> 7
VIDEO3 TV 8	<b>8</b> 8
TV 9	<b>9</b> 9
TV 0	<b>0</b> 0
CABLE Power	SHIFT + <b>Power</b> Shift + Power
CABLE CH/Level +	SHIFT + <b>+</b> Shift + Ch +
CABLE CH/Level -	SHIFT + <b>-</b> Shift + Ch -
CABLE CH Sel.	SHIFT + <b>HOME SMART</b> Shift + Smart
CABLE Mute	SHIFT + <b>MUTE</b> Shift + Mute
CABLE Volume	SHIFT + <b>+</b> Shift + Vol +
CABLE Volume -	SHIFT + <b>-</b> Shift + Vol -
CABLE 1	SHIFT + <b>1</b> Shift + 1
CABLE 2	SHIFT + <b>2</b> Shift + 2





Original	Replacement
AUX 3 CABLE 3	SHIFT + <b>3</b> Shift + 3
TAPE 4 CABLE 4	SHIFT + <b>4</b> Shift + 4
5 CABLE 5	SHIFT + <b>5</b> Shift + 5
VIDEO1 6 CABLE 6	SHIFT + <b>6</b> Shift + 6
VIDEO2 7 CABLE 7	SHIFT + <b>7</b> Shift + 7
VIDEO3 8 CABLE 8	SHIFT + <b>8</b> Shift + 8
9 CABLE 9	SHIFT + <b>9</b> Shift + 9
0 CABLE 0	SHIFT + <b>0</b> Shift + 0


Original	Replacement







Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD Power	 Power
 DVD Menu /	 Menu
 DVD Audio Sel.	 Dual
 DVD Subtitle	 Subt
 DVD Zoom	 3D
 DVD OSD	 Format
 DVD Up	 Up
 DVD Left	 Left
 DVD Enter	 Ok

Original	Replacement
 DVD Right	 Right
 DVD Down	 Down
 DVD Display	 Info
 DVD Pause	 Pause
 DVD Play	 Play
 DVD Stop / P.Scan	 Stop
 DVD <<	 <<
 DVD >>	 >>
 DVD I<<	 I<<
 DVD >>I	 >>I
 DVD 1	 1
 DVD 2	 2
 DVD 3	 3
 DVD 4	 4
 DVD 5	 5
 DVD 6	 6
 DVD 7	 7





	Original	Replacement	
VIDEO3 8	DVD 8	<b>8</b>	8
9	DVD 9	<b>9</b>	9
0	DVD 0	<b>0</b>	0
POWER POWER	SAT Power	<b>SHIFT</b> + <b>POWER</b>	Shift + Power
CH/LEVEL CH/LEVEL	SAT CH/Level +	<b>SHIFT</b> + <b>+ CH</b>	Shift + Ch +
CH/LEVEL CH/LEVEL	SAT CH/Level -	<b>SHIFT</b> + <b>CH -</b>	Shift + Ch -
CH SEL T/V	SAT CH Sel.	<b>SHIFT</b> + <b>APP MEDIA</b>	Shift + Media
MUTE MUTE	SAT Mute	<b>SHIFT</b> + <b>MUTE</b>	Shift + Mute
VOLUME VOLUME	SAT Volume +	<b>SHIFT</b> + <b>+ VOL</b>	Shift + Vol +
VOLUME VOLUME	SAT Volume -	<b>SHIFT</b> + <b>VOL -</b>	Shift + Vol -
TUNER 1	SAT 1	<b>SHIFT</b> + <b>1</b>	Shift + 1
CD 2	SAT 2	<b>SHIFT</b> + <b>2</b>	Shift + 2
AUX 3	SAT 3	<b>SHIFT</b> + <b>3</b>	Shift + 3
TAPE 4	SAT 4	<b>SHIFT</b> + <b>4</b>	Shift + 4
5	SAT 5	<b>SHIFT</b> + <b>5</b>	Shift + 5
VIDEO1 6	SAT 6	<b>SHIFT</b> + <b>6</b>	Shift + 6
VIDEO2 7	SAT 7	<b>SHIFT</b> + <b>7</b>	Shift + 7

	Original	Replacement	
VIDEO3 8	SAT 8	<b>SHIFT</b> + <b>8</b>	Shift + 8
9	SAT 9	<b>SHIFT</b> + <b>9</b>	Shift + 9
0	SAT 0	<b>SHIFT</b> + <b>0</b>	Shift + 0








Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD	 Shift + Green
 CD Pause	 Pause
 CD Play	 Play
 CD Stop	 Stop
 CD I<<	 I<<
 CD >>I	 >>I
 CD 1	 1
 CD 2	 2
 CD 3	 3
 CD 4	 4

Original	Replacement
 CD 5	 5
 CD 6	 6
 CD 7	 7
 CD 8	 8
 CD 9	 9
 CD 0	 0
 VCR Power	 Shift + Power
 VCR CH Sel.	 Shift + Media
 VCR Rec	 Shift + Rec
 VCR Play	 Shift + Play
 VCR Mute	 Shift + Mute
 VCR >>	 Shift + >>
 VCR <<	 Shift + <<
 VCR Volume -	 Shift + Vol -
 VCR Volume +	 Shift + Vol +
 VCR CH+	 Shift + Ch +
 VCR CH-	 Shift + Ch -





Original	Replacement
 VCR Pause	 +  Shift + Pause
 VCR Stop	 +  Shift + Stop
 VCR 1	 +  Shift + 1
 VCR 2	 +  Shift + 2
 VCR 3	 +  Shift + 3
 VCR 4	 +  Shift + 4
 VCR 5	 +  Shift + 5
 VCR 6	 +  Shift + 6
 VCR 7	 +  Shift + 7
 VCR 8	 +  Shift + 8
 VCR 9	 +  Shift + 9
 VCR 0	 +  Shift + 0

Original	Replacement

