

 
 


 




 





 

 







 
 



















| Original | Replacement | Original | Replacement |
|---|--|---|---|
|  Power |  Power |  Vol+ |  Vol + |
|  AUDIO |  Red |  Vol- |  Vol - |
|  CD |  Green |  Auto |  Subt |
|  AUX |  Yellow |  DSP - |  Shift + Left |
|  TV |  Blue |  DSP + |  Shift + Right |
|  VCR |  Shift + Red |  Stereo |  Dual |
|  DVD |  Shift + Green |  Setup / OSD |  Options |
|  CABLE |  Shift + Yellow |  Menu / T.Tone |  Menu |
|  SAT |  Shift + Blue |  Up |  Up |
|  CH Sel |  TV/R |  Left |  Left |
|  CH/Level Up |  Ch + |  Enter |  Ok |
|  CH/Level Down |  Ch - |  Right |  Right |
|  SPK SET |  Exit |  Down |  Down |
|  PLII PARA. |  D. Menu |  Display / Sleep |  Info |
|  Adjust - |  Shift + Down |  Display / Sleep |  Sleep |
|  Adjust + |  Shift + Up |  Return / |  Back |
|  Mute |  Mute |  Stop / P.Scan |  Stop |





| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  << / Tune - |  << |  AUX Pause |  Shift + Pause |
|  >> / Tune + |  >> |  AUX Play |  Shift + Play |
|  I<< / Preset - |  I<< |  AUX Stop |  Shift + Stop |
|  >>I / Preset + |  >>I |  AUX << |  Shift + << |
|  7CH Dir |  ECO 3D |  AUX >> |  Shift + >> |
|  1 / Tuner |  1 |  AUX >>I |  Shift + >>I |
|  2 / CD |  2 |  AUX I<< |  Shift + I<< |
|  3 / AUX |  3 | | |
|  4 / Tape |  4 | | |
|  5 |  5 | | |
|  6 / Video 1 |  6 | | |
|  7 / Video 2 |  7 | | |
|  8 / Video 3 |  8 | | |
|  9 |  9 | | |
|  0 |  0 | | |
|  AUX Power / |  Shift + Power | | |
|  AUX Rec |  Shift + Rec | | |


 









 













 
 
 
 

 
 

 

 

 

 

 

 





 









 












| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  AUDIO |  Red |  TV 3 |  3 |
|  CD |  Green |  TV 4 |  4 |
|  AUX |  Yellow |  TV 5 |  5 |
|  TV |  Blue |  TV 6 |  6 |
|  VCR |  Shift + Red |  TV 7 |  7 |
|  DVD |  Shift + Green |  TV 8 |  8 |
|  CABLE |  Shift + Yellow |  TV 9 |  9 |
|  SAT |  Shift + Blue |  TV 0 |  0 |
|  TV Power |  Power |  CABLE Power |  Shift + Power |
|  TV CH + |  Ch + |  CABLE CH/Level + |  Shift + Ch + |
|  TV CH - |  Ch - |  CABLE CH/Level - |  Shift + Ch - |
|  TV CH Sel. |  Media |  CABLE CH Sel. |  Shift + Smart |
|  TV Mute |  Mute |  CABLE Mute |  Shift + Mute |
|  TV Volume + |  Vol + |  CABLE Volume |  Shift + Vol + |
|  TV Volume - |  Vol - |  CABLE Volume - |  Shift + Vol - |
|  TV 1 |  1 |  CABLE 1 |  Shift + 1 |
|  TV 2 |  2 |  CABLE 2 |  Shift + 2 |


 



 

 
 






 
 
 

 
 


 
 
 


 


 

 



 



 

 

 
 


 



 
 


 
 


 
 


 
 





| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  AUDIO |  Red |  DVD Right |  Right |
|  CD |  Green |  DVD Down |  Down |
|  AUX |  Yellow |  DVD Display |  Info |
|  TV |  Blue |  DVD Pause |  Pause |
|  VCR |  Shift + Red |  DVD Play |  Play |
|  DVD |  Shift + Green |  DVD Stop |  Stop |
|  SAT |  Shift + Blue |  DVD << |  << |
|  CABLE |  Shift + Yellow |  DVD >> |  >> |
|  DVD Power |  Power |  DVD I<< |  I<< |
|  DVD Menu |  Menu |  DVD >>I |  >>I |
|  DVD Audio Sel. |  Dual |  DVD 1 |  1 |
|  DVD Subtitle |  Subt |  DVD 2 |  2 |
|  DVD Zoom |  3D |  DVD 3 |  3 |
|  DVD OSD / |  Format |  DVD 4 |  4 |
|  DVD Up |  Up |  DVD 5 |  5 |
|  DVD Left |  Left |  DVD 6 |  6 |
|  DVD Enter |  Ok |  DVD 7 |  7 |





| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  AUDIO |  Red |  CD 5 |  5 |
|  CD |  Green |  CD 6 |  6 |
|  AUX |  Yellow |  CD 7 |  7 |
|  TV |  Blue |  CD 8 |  8 |
|  VCR |  Shift + Red |  CD 9 |  9 |
|  SAT |  Shift + Blue |  CD 0 |  0 |
|  CABLE |  Shift + Yellow |  VCR Power |  Shift + Power |
|  DVD |  Shift + Green |  VCR CH Sel. |  Shift + Media |
|  CD Pause |  Pause |  VCR Rec |  Shift + Rec |
|  CD Play |  Play |  VCR Play |  Shift + Play |
|  CD Stop |  Stop |  VCR Mute |  Shift + Mute |
|  CD I<< |  I<< |  VCR >> |  Shift + >> |
|  CD >>I |  >>I |  VCR << |  Shift + << |
|  CD 1 |  1 |  VCR Volume - |  Shift + Vol - |
|  CD 2 |  2 |  VCR Volume + |  Shift + Vol + |
|  CD 3 |  3 |  VCR CH+ |  Shift + Ch + |
|  CD 4 |  4 |  VCR CH- |  Shift + Ch - |



