
 
 

 
 














 
 
 















 

 

 
 


 



 
 





 


 





 





Original	Replacement	Original	Replacement
	OSD		Angle
	Search		Audio
	Mute		PBC
	Source		Title
	1		Up
	2		Stop
	3		Play
	4		Pause
	5		Left
	6		Enter
	7		Right
	8		Slow
	9		Setup
	0		Down
	10+		Zoom
	Step		Menu
	Subtitle		Repeat
	Smart / List		Info / Angle
	Red / Netflix / Search		Audio / Lang I/II
	Mute / Dimmer		D.Menu / Top
	AV / Input / RDS		Sound / Title
	1		Up
	2		Stop / Hold
	3		Play / Slow
	4		Pause / Step / Freeze
	5		Left
	6		OK
	7		Right
	8		Shift + Play /
	9		Setup / OPT /
	0		Down
	Guide / EPG / -/--		Zoom / Size
	Shift + Pause / Step /		Menu / Home
	Subtitle / EQ		Green / APP / Repeat





Original	Replacement	Original	Replacement
AB	 REPEAT A-B Yellow / YouTube / Repeat		
I<<	 PRESET- I<< / Preset-		
>>I	 PRESET+ >>I / Preset+		
Program	 PROGRAM TV/Radio /		
Display	 MEDIA DISPLAY Display / Media		
<<	 TUNE- << / Tune-		
>>	 TUNE+ >> / Tune+		

