



Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	TXT		Text / Goto
	V+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	V-		Vol-
	Input		AV / Input / RDS
	P-		CH- / Page-
	Home		Menu / Home
	Guide		Guide / EPG / -/--
	Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	Prime Video		Shift + Blue / Prime
	Twitch		Shift + Green / APP /
	Fav1		Smart / List





Original	Replacement
 Fav2	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement

