



Original		Replacement		Original		Replacement	
	Power		Power		P+		CH+ / Page+
	Source		AV / Input / RDS		Vol-		Vol-
	1		1		P-		CH- / Page-
	2		2		Mute		Mute / Dimmer
	3		3		[G]		Menu / Home
	4		4		Up		Up
	5		5		i		Info / Angle
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Back		Back / Return
	Lang		Audio / Lang I/II		Down		Down
	0		0		Exit		Exit / Cancel / Clear
	TXT		Text / Goto		<<		<< / Tune-
	Home		Smart / List		Pause		Pause / Step / Freeze
	Home		D.Menu / Top		>>		>> / Tune+
	Vol+		Vol+		Rec		Rec / Rec Mode





	Original	Replacement		Original	Replacement
	 Play	 Play / Slow			
	 Stop	 Stop / Hold			
	 Red	 Red / Netflix / Search			
	 Green	 Green / APP / Repeat			
	 Yellow	 Yellow / YouTube / Repeat			
	 Blue	 Blue / Prime Video / Random			

