



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Sleep	 Sleep / Timer
 0	 0
 Info	 Info / Angle
 PLUGIH	 Setup / OPT /
 EPG	 Guide / EPG / -/--
 Fav	 Fav / Marker / PC

Original	Replacement
 <	 I<< / Preset-
 Up	 Up
 >	 >>I / Preset+
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Back	 Back / Return
 CH+	 CH+ / Page+
 Vol-	 Vol-
 TV	 AV / Input / RDS
 CH-	 CH- / Page-
 Radio	 TV/Radio /
 Radio	 Shift + 6





Original	Replacement
Rec	Rec / Rec Mode
Play/Pause	Play / Slow
Stop	Stop / Hold
FWD	>> / Tune+
REV	<< / Tune-
TV	Shift + 1
Audio	Audio / Lang I/II
Help	D.Menu / Top
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Cyan	Blue / Prime Video / Random
Text	Text / Goto
Timer	Shift + Sleep / Timer
PIP	Picture / Format
Media	Display / Media

Original	Replacement

