



Original	Replacement
 Power	 Power
 Mute	 Mute
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Nicam / A2	 Shift + Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Original	Replacement
 Recall / Mouse	 Back
 FAV	 Pre Ch
 Red	 Red
 Settings	 Options
 Home	 Smart
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Source	 AV
 Info	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Menu	 Menu
 Exit	 Exit





Original	Replacement	Original	Replacement
Vol +	Vol +	Auto	Shift + Media
Vol -	Vol -	Repeat	Shift + Text
Media	Media	A-B	Shift + Play
TV / Radio	TV/R	Aspect	Format
CH +	Ch +		
CH -	Ch -		
Play/Pause / Text	Play		
Play/Pause / Text	Pause		
Play/Pause / Text	Text		
<< / Size	<<		
<< / Size	Eject		
>> / Reveal	>>		
Stop / Hold	Stop		
I<< / Index	I<<		
>>I / Subpage	>>I		
Cancel	Shift + Exit		
Subtitle	Subt		

Original	Replacement	Original	Replacement
Auto	Shift + Media	Repeat	Shift + Text
A-B	Shift + Play	Aspect	Format

