 






 


 







 
 

 
 
 
 


 


 








 



 

 

 




Original		Replacement		Original		Replacement	
	Power		Power		[Z]		Format
	Open/Close		Eject		Camera		3D
	[]X		Smart		(Z))		Dual
	EQ		Media		Time		AV
	Mute		Mute		Prog		Sleep
	→[]←		Subt		Setup/Mem		Options
	1		1		Title		List
	2		2		Menu/PBC		Menu
	3		3		Return/Exit		Back
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right/FAV+		Right
	7		7		Left/FAV-		Left
	8		8		Enter		Ok
	9		9		Function		Pre Ch
	0		0		Tv/Radio		TV/R
	+10		Guide		DVD		D. Menu





Original	Replacement	Original	Replacement
	Stop		Stop
	Play/Pause		Play
	Slow		Pause
	Info		Info
	<</Tuning-		<<
	>>/Tuning+		>>
	I<</Channel-		I<<
	>>I/Channel+		>>I
	Teletext		Text
	EPG		Shift + Guide
	Vol+		Vol +
	Vol-		Vol -
	Red/Repeat		Red
	Green/A-B		Green
	Yellow/Zoom		Yellow
	Blue/Clear		Blue

