



 











 



 


 
 
















 



 





 



 

 

















 

 





 

 
 





 







Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search

Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search










 


























 



 







 







 

 

 












 










 

 






Original	Replacement
Green / >>	>> / Tune+
Green / >>	Green / APP / Repeat
Yellow / I<<	I<< / Preset-
Yellow / I<<	Yellow / YouTube / Repeat
Blue / >>I	>>I / Preset+
Blue / >>I	Blue / Prime Video / Random
Text / Play/Pause	Text / Goto
Text / Play/Pause	Play / Slow
Text / Play/Pause	Pause / Step / Freeze
Stop / Still	Stop / Hold
Radio	TV/Radio /
Size / Aspect	Picture / Format
Size / Aspect	Zoom / Size
[≡x]	Eject / Surround
Subtitle / [≡o]	Subtitle / EQ
DMP	D.Menu / Top
Rec	Rec / Rec Mode

Original	Replacement






Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-

Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-





Original	Replacement
 Green	 Green / APP / Repeat
 >>	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>	 >> / Preset+
 [=]	 Text / Goto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 [=+]	 Shift + Stop /
 Stop/Still	 Stop / Hold
 Radio	 TV/Radio /
 [=◆]/[++]	 Zoom / Size
 [=x]	 Eject / Surround
 [=o]/Subtitle	 Subtitle / EQ
 DMP	 D.Menu / Top
 Rec	 Rec / Rec Mode

Original	Replacement

